



THE COMPLETE INSTALL GUIDE

Fencing, the **easy way.**

Meet the dream team behind a fence that's built to last. Every piece plays its part to keep your fence strong, level, and looking like it belongs in a design magazine. Grab your toolbox — it's showtime.

01 The Kit

Eight parts, each with one job. Learn the names once and the whole build reads like a sentence.

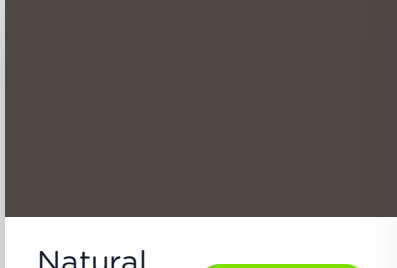
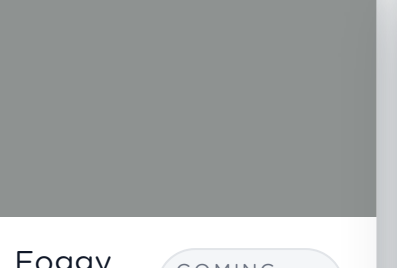
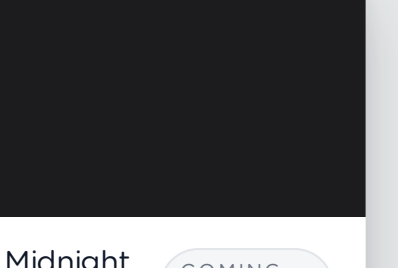
 ecStarter The first course — sets the line every panel follows.	 ecPanel Interlocking body of the fence. Each course adds 6" of height.	 Posts Structural uprights, set plumb in concrete or surface-mounted.	 Post Caps Protective, finished tops for every post.
 Screws #10 × ¾" self-drilling screws throughout, plus #10 × 1½" hex-head for the ecSeam Covers.	 ecSeam Cover Conceals the joint between two panel sections.	 ecEnd Cover A clean, finished edge on your end posts.	 ecCorner Cover Keeps exterior angles clean and tight.

02 Grab Your Toolbox

01 Measuring Tape For accurate layout.	02 Level Every post, every time.	03 Drill For self-drilling screws.
04 Post Hole Digger Manual, to required depth.	05 Circular Saw With a ferrous metal-cutting blade (posts + panels).	06 Concrete Mix 3,000 PSI or higher.

Trim Cutting The aluminum covers (ecSeam, ecCorner, ecEnd) cut cleanest with a non-ferrous metal blade (TCT, 80T+) — a different blade than the one for posts and panels.

03 Choose Your Vibe

 Natural Bronze AVAILABLE	 Arctic White AVAILABLE	 Foggy Gray COMING SOON	 Midnight Black COMING SOON
---	--	--	---

04 Pick a Height

Each ecPanel adds or subtracts 6 inches — easy math, easy life. Three standard configurations:

4 ft 1 ecStarter + 7 ecPanels	6 ft 1 ecStarter + 11 ecPanels	8 ft 1 ecStarter + 15 ecPanels
---	--	--

Pro Tip Always check your local building codes for maximum height and post spacing — typically 4 to 6 feet on center. You know how rules are.

05 8 Steps to Done

Our example: two 12-ft sections and one 6-ft corner, posts spaced 6 ft on center. Follow along.

01	Measure, Mark & Dig Measure the area where the fence will go and mark each post location. Use a manual post hole digger to dig holes to the required depth and diameter. Tip — Posts typically sit 4-6 ft on center, depending on height. Always double-check your local codes.
02	Set Posts & Pour Concrete Place the posts into the holes and pour concrete. Make sure each post is perfectly level before the concrete sets. Tip — A level post equals a fence that saves you a crooked fence later.
03	Cap the End Posts Once the concrete cures, fasten the ecEnd Cover to your end posts first — a clean, finished edge, done right from the start. 3 × #10 × ¾" self-drilling screws
04	Install Every ecStarter First Cut to width with a circular saw and ferrous metal-cutting blade if needed. A 12-ft starter spans three posts — fasten one screw at each. Install all starters across the entire run before hanging a single panel; that sets the reference line the whole fence follows. Tip — Get the starters straight and every panel after lines up automatically, like they actually like each other. 1 × #10 × ¾" per post the starter crosses
05	Hang the ecPanels — Top-Down Work downward from the starter, one course at a time. Hold each panel at about 45° from the post, hook its top c-lip under the course above, then rotate it down flat — the patented interlock snaps into alignment. Cut to fit as needed and secure to the posts. Tip — Each ecPanel adds or removes 6 inches of height. Easy math, easy life. 1 × #10 × ¾" per post the panel crosses
06	Cover the Seams The ecSeam Cover hides the joint between two panel sections and comes pre-drilled with five holes. Zero visible seams, zero stress. 5 × #10 × 1½" self-drilling hex-head screws
07	Wrap the Corners Got a corner? We've got a cover. The ecCorner Cover fastens to one panel face — top, center, bottom — keeping exterior angles clean and tight while the opposite leg stays fastener-free. 3 × #10 × ¾" self-drilling screws
08	Cap It Off Place a post cap on each post. They protect against rain, sun, and wear — all while giving your fence that polished, finished look.

FINISH LINE

**Strong. Stunning.
Affordable.**

Pick all three — because you finally can. Now sit back, admire your masterpiece, and maybe brag a little.

